


**data**video

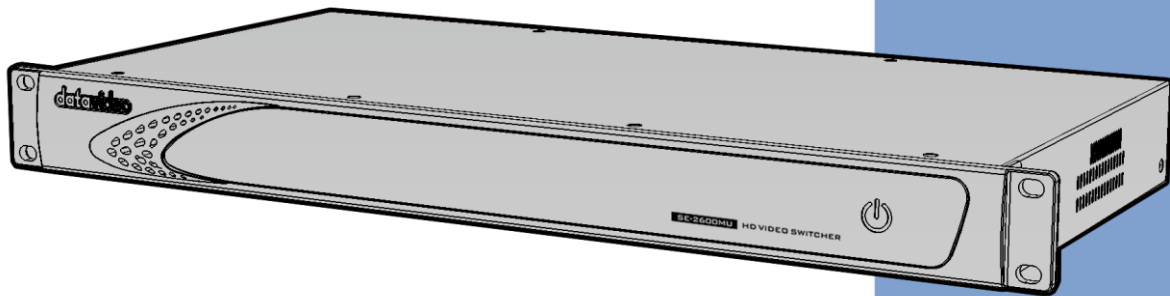

HD 8-CHANNEL DIGITAL  
VIDEO SWITCHER

SE-2600MU

**Instruction Manual**

[www.datavideo.com](http://www.datavideo.com)

# Table of Contents

<b>FCC COMPLIANCE STATEMENT</b> .....	<b>4</b>
<b>WARNINGS AND PRECAUTIONS</b> .....	<b>4</b>
<b>WARRANTY</b> .....	<b>5</b>
<i>STANDARD WARRANTY</i> .....	5
<i>FIVE YEAR WARRANTY</i> .....	5
<b>DISPOSAL</b> .....	<b>6</b>
<b>CHAPTER 1 INTRODUCTION</b> .....	<b>7</b>
1.1 FEATURES .....	7
<b>CHAPTER 2 CONNECTIONS AND CONTROLS</b> .....	<b>8</b>
2.1 FRONT PANEL .....	9
2.2 REAR PANEL .....	9
<b>CHAPTER 3 PREPARATIONS</b> .....	<b>13</b>
3.1 CONNECTING THE POWER SUPPLY .....	13
3.2 CONNECTING DEVICES .....	13
<i>Connecting the Video and Audio Input Devices</i> .....	13
<i>When linking via tally connection</i> .....	14
<i>Connecting the Video and Audio Output Devices</i> .....	14
3.3 MULTI VIEW.....	14
<b>CHAPTER 4 NETWORK SETUP FOR SWITCHER</b> .....	<b>16</b>
4.1 STATIC IP CONFIGURATION .....	16
4.2 DHCP MODE .....	17
<b>CHAPTER 5 APPENDICES</b> .....	<b>19</b>
APPENDIX 1 TALLY OUTPUTS .....	19
APPENDIX 2 GPI / GPO CONNECTIONS .....	21
APPENDIX 3 RS-232 SERIAL PORT PINOUT .....	22
APPENDIX 4 FIRMWARE UPDATE .....	23
APPENDIX 5 DIMENSIONS & WEIGHT.....	24
APPENDIX 6 SPECIFICATIONS .....	25
<b>SERVICE AND SUPPORT</b> .....	<b>28</b>

**Disclaimer of Product & Services**

The information offered in this instruction manual is intended as a guide only. At all times, Datavideo Technologies will try to give correct, complete and suitable information. However, Datavideo Technologies cannot exclude that some information in this manual, from time to time, may not be correct or may be incomplete. This manual may contain typing errors, omissions or incorrect information. Datavideo Technologies always recommend that you double check the information in this document for accuracy before making any purchase decision or using the product. Datavideo Technologies is not responsible for any omissions or errors, or for any subsequent loss or damage caused by using the information contained within this manual. Further advice on the content of this manual or on the product can be obtained by contacting your local Datavideo Office or dealer.

## FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## Warnings and Precautions

1. Read all of these warnings and save them for later reference.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit in or near water.
5. Do not place this unit on an unstable cart, stand, or table. The unit may fall, causing serious damage.
6. Slots and openings on the cabinet top, back, and bottom are provided for ventilation. To ensure safe and reliable operation of this unit, and to protect it from overheating, do not block or cover these openings. Do not place this unit on a bed, sofa, rug, or similar surface, as the ventilation openings on the bottom of the cabinet will be blocked. This unit should never be placed near or over a heat register or radiator. This unit should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should only be operated from the type of power source indicated on the marking label of the AC adapter. If you are not sure of the type of power available, consult your Datavideo dealer or your local power company.
8. Do not allow anything to rest on the power cord. Do not locate this unit where the power cord will be walked on, rolled over, or otherwise stressed.
9. If an extension cord must be used with this unit, make sure that the total of the ampere ratings on the products plugged into the extension cord do not exceed the extension cord rating.
10. Make sure that the total amperes of all the units that are plugged into a single wall outlet do not exceed 15 amperes.
11. Never push objects of any kind into this unit through the cabinet ventilation slots, as they may touch dangerous voltage points or short out parts that could result in risk of fire or electric shock. Never spill liquid of any kind onto or into this unit.
12. Except as specifically explained elsewhere in this manual, do not attempt to service this product yourself. Opening or removing covers that are marked "Do Not Remove" may expose you to dangerous voltage points or other risks, and will void your warranty. Refer all service issues to qualified service personnel.
13. Unplug this product from the wall outlet and refer to qualified service personnel under the following conditions:
  - a. When the power cord is damaged or frayed;
  - b. When liquid has spilled into the unit;



- c. When the product has been exposed to rain or water;
- d. When the product does not operate normally under normal operating conditions. Adjust only those controls that are covered by the operating instructions in this manual; improper adjustment of other controls may result in damage to the unit and may often require extensive work by a qualified technician to restore the unit to normal operation;
- e. When the product has been dropped or the cabinet has been damaged;
- f. When the product exhibits a distinct change in performance, indicating a need for service.

## Warranty

### ***Standard Warranty***

- Datavideo equipment is guaranteed against manufacturing defects for **one (1) year** from the date of purchase.
- A valid purchase invoice or other proof of purchase must be provided when requesting warranty service.
- The warranty period begins on the actual purchase date. If the purchase date cannot be verified, the warranty period will begin **thirty (30) days after shipment** from a Datavideo office.
- Non-Datavideo branded products (products without the Datavideo logo) are covered by a **one-year warranty** from the date of purchase.
- Damage caused by accident, misuse, unauthorized repair, or exposure to sand, grit, or water is **not covered** under warranty.
- Virus or malware infections on computer systems are **not covered** under warranty.
- Any issues caused by unauthorized third-party software installations that are not required by Datavideo systems are **not covered** under warranty.
- All shipping, mailing, or transportation costs, including insurance, are the responsibility of the owner unless otherwise stated.
- **Teleprompter glass is not covered** under warranty.
- Accessories, including **headphones, cables, batteries, metal parts, housings, protective cases, cable reels, and consumable items**, are **not covered** under warranty.
- Warranty is valid only in the country or region of purchase.
- All other claims **not explicitly stated** are not covered.
- Your statutory rights remain unaffected.


### ***Five Year Warranty***

- Starting January 1, 2026, all Datavideo products that are successfully registered on the Datavideo official website are eligible for a **free four-year extended warranty**, in addition to the standard one-year warranty, for a total of **five years of coverage**.



- **Only registrations completed through the Datavideo official website qualify** for the five-year warranty. Registrations completed through local Datavideo offices, resellers, or authorized distributors **are not eligible**.
- Certain parts with limited service life — including **LCD panels, DVD drives, hard drives, solid-state drives, SD cards, USB thumb drives, lighting equipment, non-PCIe cards, and third-party PC components** — are covered by a **one-year warranty only** and are **not eligible** for the extended warranty.
- **Camera modules** are covered by a **three-year warranty from the date of purchase**.

## Disposal

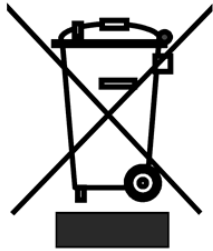

### **For EU Customers only - WEEE Marking**

This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



**CE Marking** is the symbol as shown on the left of this page. The letters "CE" are the abbreviation of French phrase "Conformité Européene" which literally means "European Conformity". The term initially used was "EC Mark" and it was officially replaced by "CE Marking" in the Directive 93/68/EEC in 1993. "CE Marking" is now used in all EU official documents.

# Chapter 1 Introduction

The SE-2600MU HD Video Switcher is a versatile and powerful 8-input live production switcher, ideal for professional AV environments such as corporate conference rooms and school classrooms. Supporting 1080p/60 (3G) High Definition video resolution, it offers a mix of 4x 3G-SDI and 4x HDMI inputs, along with 6 outputs including 3x 3G-SDI and 3x HDMI. Designed for versatile AV applications, it features advanced effects like Chroma Keyers, Luma Key, DSK, PIP, and DVE.

Additionally, it supports audio integration, logo insertion, title overlays, and offers a variety of transitions for a sophisticated production experience.

## 1.1 Features


- FHD 1080P signals on input and output
- 8 live channels: 4x 3G-SDI + 4x HDMI
- 6 outputs: 3x 3G-SDI +3x HDMI
- Support 1080p SDI input Level A/B
- 2 x Balanced Mini XLR audio inputs
- Each output can be used as an AUX designated output signal
- 4 x Upstream Keyers and 2 x Downstream Keyers
- 4 x Picture-in-Picture
- Built-in CG title overlay system
- 2 Logo insertion (Animation logo, X/Y size)
- Any Input (1-8) can be used as a Frame store (Stills Store)
- Crosspoint assignment (XPT)
- Wipe, Mix, Auto and Cut Transitions
- Tally output
- Analogue Gen-Lock supporting Black Burst and Tri Level cross reference

## Chapter 2 Connections and Controls

In this chapter, we will briefly describe the functions of different ports. To use the switcher functions and access the relevant settings, you can connect the controller via either the RS-232 or Ethernet interface. For instructions on using the respective control protocols, refer to the control protocol documents, which can be downloaded from the SE-2600MU product page. The document links are listed below:


- [RS-232 Control Protocol](#)
- [Ethernet Control Protocol](#)

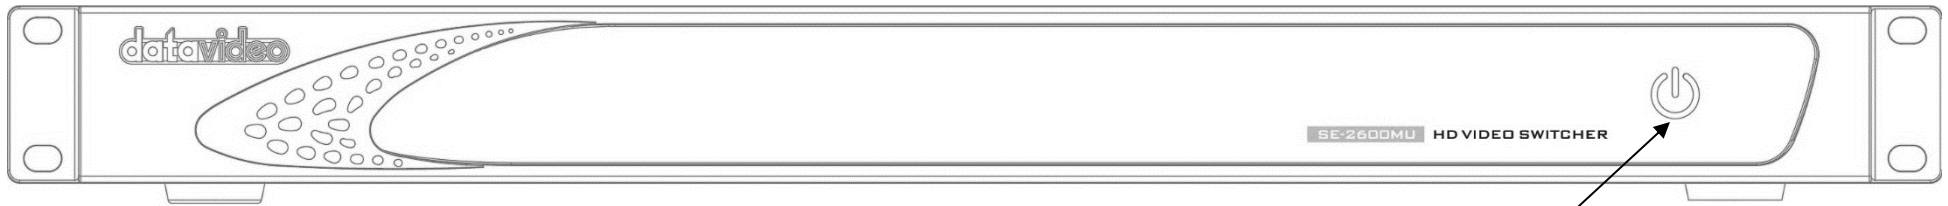





## 2.1 Front Panel



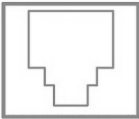



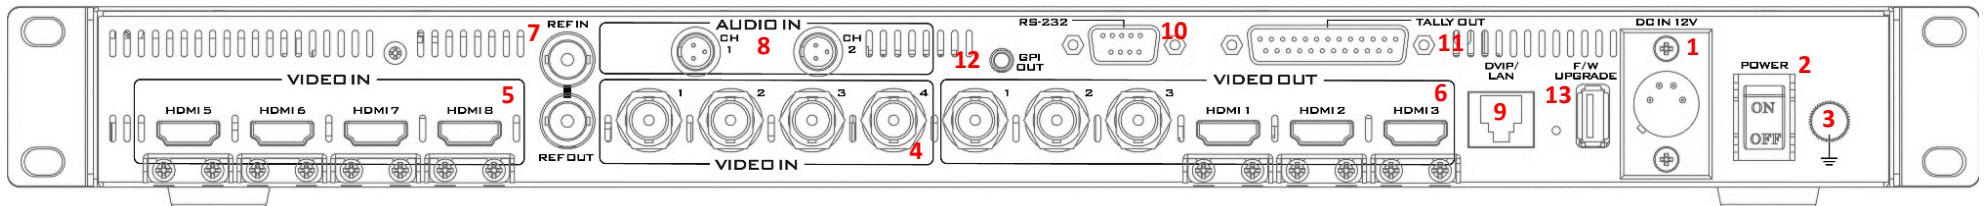


**Power Button**  
Press the power button to start and shut down the machine. Please note that to use the power button on the front panel, you will have to turn on the power switch on the rear panel first.
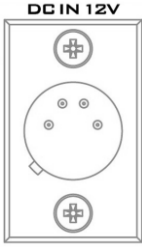
## 2.2 Rear Panel

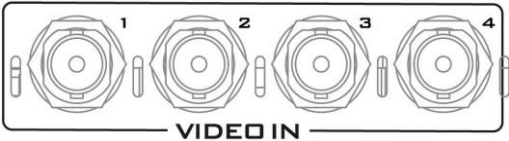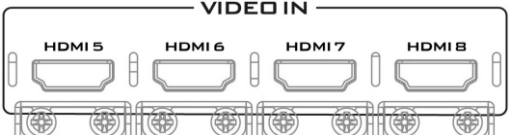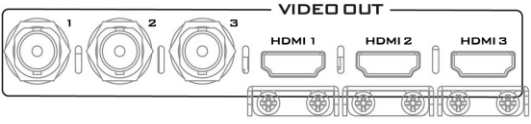

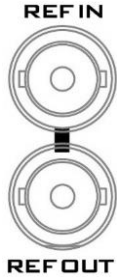Power	
 <p style="text-align: center;"><b>DC IN 12V</b></p>	<p><b>1. DC IN</b> Connect the supplied 12V PSU to this 4 PIN XLR socket Pin 1 = GND ( - ) Pin 2 = NC Pin 3 = NC Pin 4 = VCC ( + )</p>
 <p style="text-align: center;"><b>POWER</b></p>	<p><b>2. Power Button</b> The power button starts and shuts down the machine.</p>
	<p><b>3. Grounding Terminal</b> When connecting this unit to any other component, make sure that it is properly grounded by connecting this terminal to an appropriate point. When connecting, use the socket and be sure to use wire with a cross-sectional area of at least 1.0 mm<sup>2</sup>.</p>
Video Input	
 <p style="text-align: center;"><b>VIDEO IN</b></p>	<p><b>4. SDI Video Inputs 1 – 4</b> SDI video input channels 1 – 4.</p>
 <p style="text-align: center;"><b>VIDEO IN</b></p>	<p><b>5. HDMI Video Inputs 5 – 8</b> SDI video input channels 5 – 8.</p>
Video Output	
 <p style="text-align: center;"><b>VIDEO OUT</b></p>	<p><b>6. SDI/HDMI Video Outputs</b> The 3 SDI and 3 HDMI video outputs are user-defined outputs. Each of these outputs has the option to be:</p> <ul style="list-style-type: none"> <li>• Multiview</li> <li>• Program</li> <li>• Preview</li> <li>• Program + DSK</li> <li>• Clean Program</li> <li>• Clean Preview</li> <li>• Input 1 – 8</li> <li>• Still 1/2</li> <li>• Flex Src 1</li> </ul>

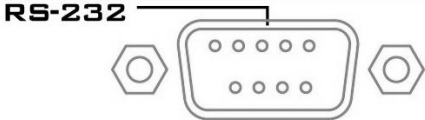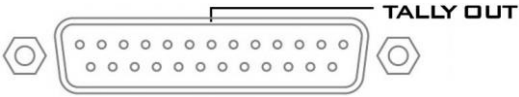SYNC I/O	
	<p><b>7. REF IN/OUT</b></p> <p>The SE-2600MU can be synchronized with other studio equipment such as cameras. <b>REF IN</b> accepts Tri-level or Black Burst sync. <b>REF OUT</b> can be used to pass the sync signal to other studio equipment such as cameras or recorders.</p>
Audio	
	<p><b>8. AUDIO IN</b></p> <p>Supports two XLR balanced audio input channels.</p>
Control	
	<p><b>9. Ethernet Port</b></p> <p>The DVIP port is designed for the user to access the switcher's settings and functions on a PC/laptop or an Ethernet controller from a remote location. You can either use a static IP address to connect or connect with DHCP. For details about using this port, refer to the <a href="#">Ethernet control protocol document</a> which is available on the product page.</p> <p>Please note that the switcher uses a static IP address by default which is 192.168.100.101. You can use the reset hole next to the USB FW Upgrade port to restore the default IP address. Use a needle to push the reset hole then hold for about 5 to 10 seconds until the machine reboots itself to restore the switcher's default IP address.</p> <p>You can use any standard Ethernet cables to connect. However, for transmission distances over 100 meters, please use a CAT6A 23 AWG Ethernet cable or higher.</p> <p>Refer to <a href="#">Chapter 4</a> for Network Setup.</p>


	<p><b>10. RS-232 REMOTE</b></p> <p>The RS-232 port is designed for switcher control at a remote location. You can connect a custom keyboard controller or a PC/laptop with an RS-232 control interface to this port.</p> <p>To access the switcher’s settings and functions, refer to the <a href="#">RS-232 control protocol document</a> which is available on the product page.</p> <p>For details about making your own RS-232 cable, refer to <a href="#">Appendix 3</a> or contact your local Datavideo distributors.</p>
	<p><b>11. TALLY OUT</b></p> <p>The SE-2600MU Tally Output port provides bi-colour tally information to a number of other Datavideo products, such as the ITC-100 eight channel talkback system or the Datavideo TLM range of monitors.</p> <p>Refer to <a href="#">Appendix 1</a> for more details of the tally cable.</p>
	<p><b>12. GPI OUT</b></p> <p>The <i>GPI socket</i> can be used for simple external control.</p> <p>Refer <a href="#">Appendix 2</a> for specifics about making your own GPI cable.</p>
<b>General</b>	
	<p><b>13. USB FW Upgrade Port</b></p> <p>Connect the USB drive containing the switcher’s latest firmware files to this port for firmware upgrade. Refer to <a href="#">Appendix 4</a> for detailed instructions.</p>

## Chapter 3 Preparations

In this chapter, we will describe various essential devices to be connected to the switcher in order to complete the system setup. If you possess the skills for setting up the production system, feel free to skip this chapter.

### 3.1 Connecting the Power Supply


Connect the DC output plug of the supplied AC adapter to the DC IN 12V connector on the rear of the switcher. Then, plug the other end into a wall socket.

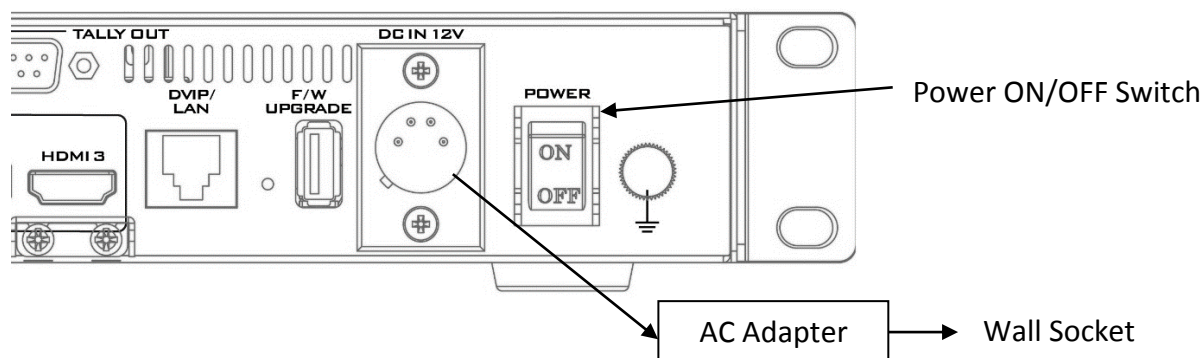

### 3.2 Connecting Devices


#### *Connecting the Video and Audio Input Devices*

Connect cameras, computers and other video input devices to the video input connectors on the rear of the unit and connect an audio mixer to audio input connectors.

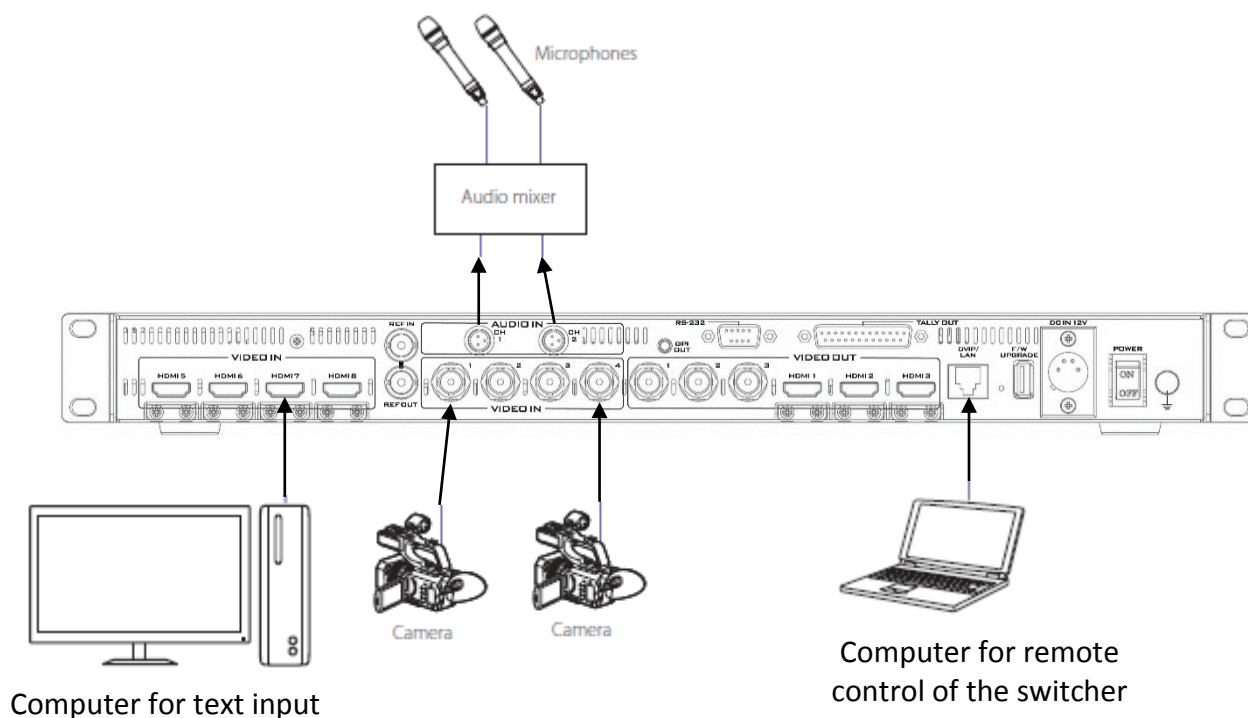


### ***When linking via tally connection***

Connect the switcher's tally connector to the tally connector on a commercially available tally box.

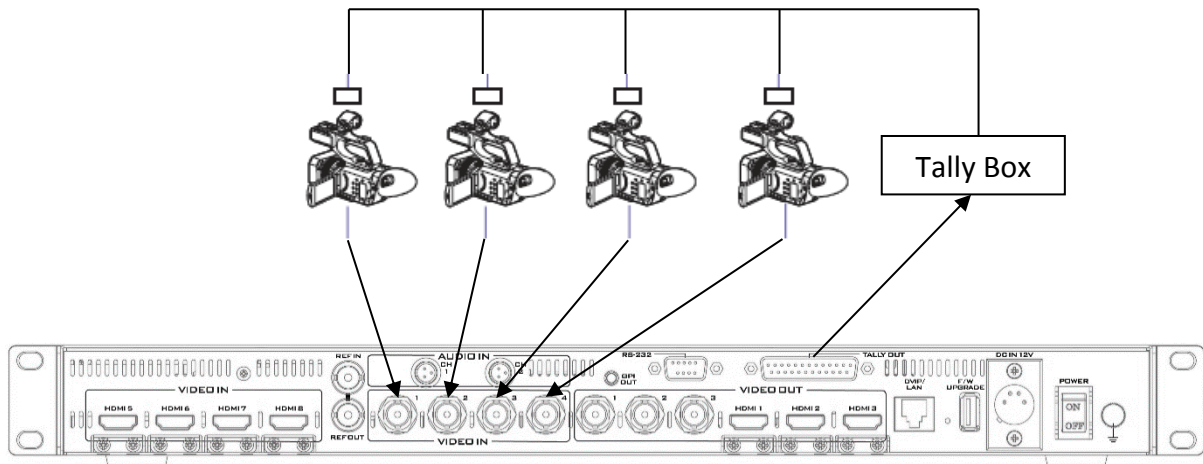

### ***Connecting the Video and Audio Output Devices***

Connect projectors, large displays and other video output devices to the video output connectors on the rear of the switcher.

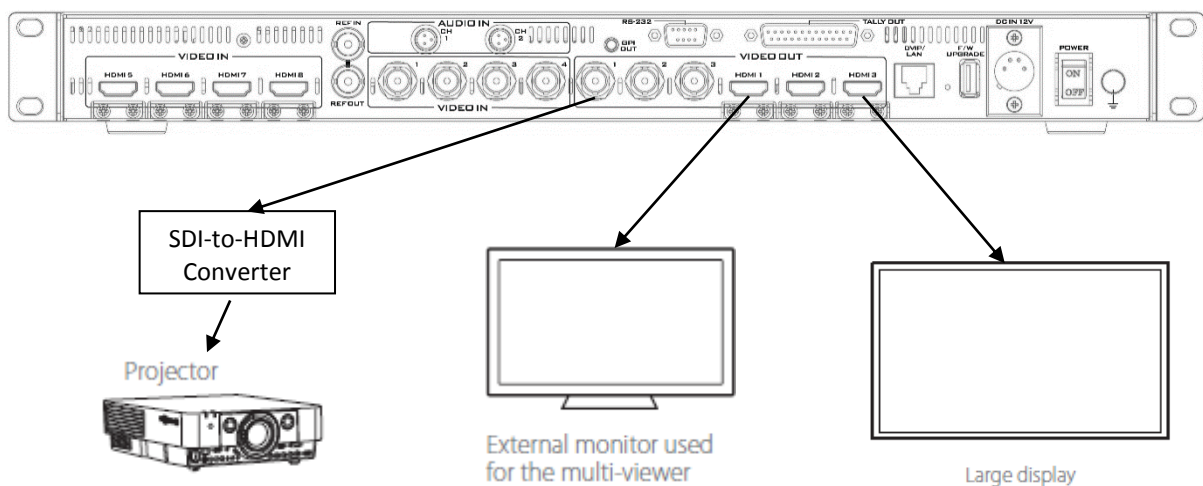

## **3.3 Multi View**

The SE-2600MU Multi view output can be supplied from the HDMI or SDI outputs. The Multi view shows monitoring images for **Preview (PVW)**, **Program (PGM)** and **Inputs 1~8**. The Multi view can also show **audio level bars** overlaid on the Program image. This confirms the analogue XLR audio input is being received and embedded to the selected Program output(s).

Since a variety of multi-image layouts is available, you can use the Multi view to monitor video and audio in a number of different configurations. The sources can be swapped around using the cross point function. For each setup, embedded audio level indication is available on the Preview and Program windows.

**Note:** You can also enable a red tally indication box shown around the sources selected for Program OUT and these selected sources should be displayed at the switcher's selected Program output(s). A **Green tally indication box** is usually enabled around the sources selected for Preview. These are the next image sources to be mixed to, wiped in or cut to the Program OUT depending on the user's preference.

## Chapter 4 Network Setup for Switcher

The DVIP port is designed for the user to access the switcher's settings and functions on a PC/laptop or an Ethernet controller from a remote location. You can either use a static IP address to connect or connect with DHCP.

Section 4.1 discusses how you can establish direct connection between the SE-2600MU and a Windows computer. In Section 4.2, we will show you how to access the SE-2600MU remotely on your PC or laptop.

### 4.1 Static IP Configuration

**When new from the factory the SE-2600MU will initially have a static IP address of 192.168.100.101.** The unit can be directly connected to a Windows-based computer using an RJ-45 Ethernet cable. The following setup should allow you to initially configure the unit's static IP settings.


System requirements and setup are provided as follows:

- An SE-2600MU Unit
- Windows 7/8/10 laptop or PC
- An RJ-45 Ethernet cable



#### Instructions

1. First physically connect the SE-2600MU to a Windows computer using an RJ-45 Ethernet cable.
2. Turn on the Windows computer and set it to **static IP setup** within the **Windows Network and Sharing Centre**. In our example, the computer is given the following IP settings so that the computer matches the same IP range as the switcher.

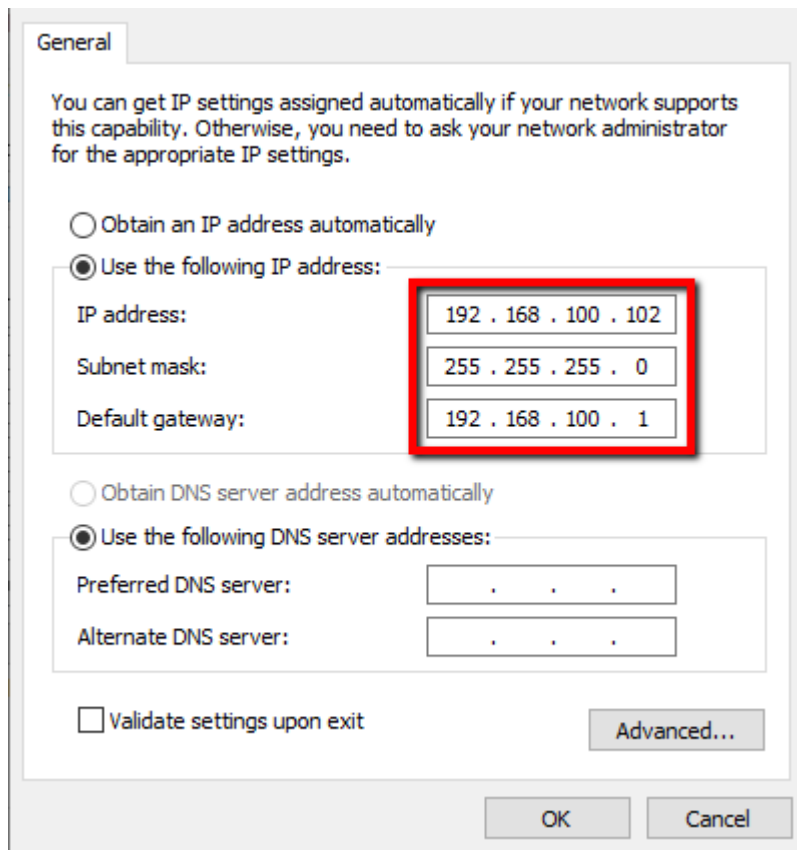


3. Now turn on your switcher to establish connection.

**Tip:** For details about modifying the switcher's IP address, refer to the [Ethernet control protocol document](#) which is available on the product page. After changing your network settings, always reboot your switcher for the new settings to become effective.

## 4.2 DHCP Mode

You can also access the SE-2600MU over an existing TCP/IP LAN type network. In order to initially set up the SE-2600MU, you may need the assistance of your local I.T. specialist to help with the network settings. To help guide you, we have included a quick network setup guide as well as a simplified network setup example below; further advice may be available through your dealer locally or your Datavideo regional office.

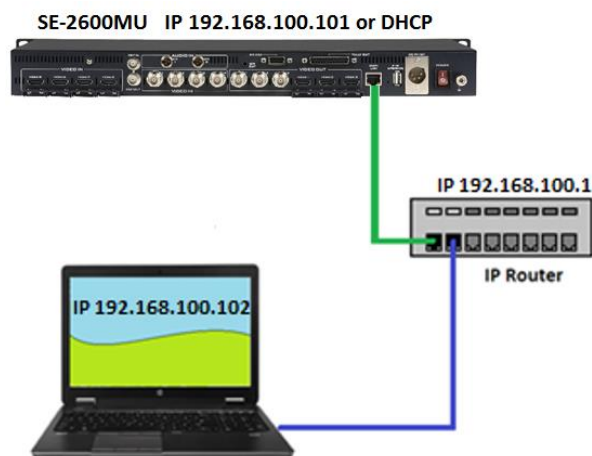


To create this simple dedicated SE-2600MU IP network you will need:

- An IP router which can assign/give IP addresses.
- Two RJ-45 cables.
- Windows 7/8/10 laptop or PC.
- The IP router Administrator login and password.

### Instructions

1. First connect the router to the SE-2600MU and the Windows computer using two RJ-45 cables.
2. Turn on the Windows computer and set it to **DHCP setup** within the **Windows Network and Sharing Centre**.

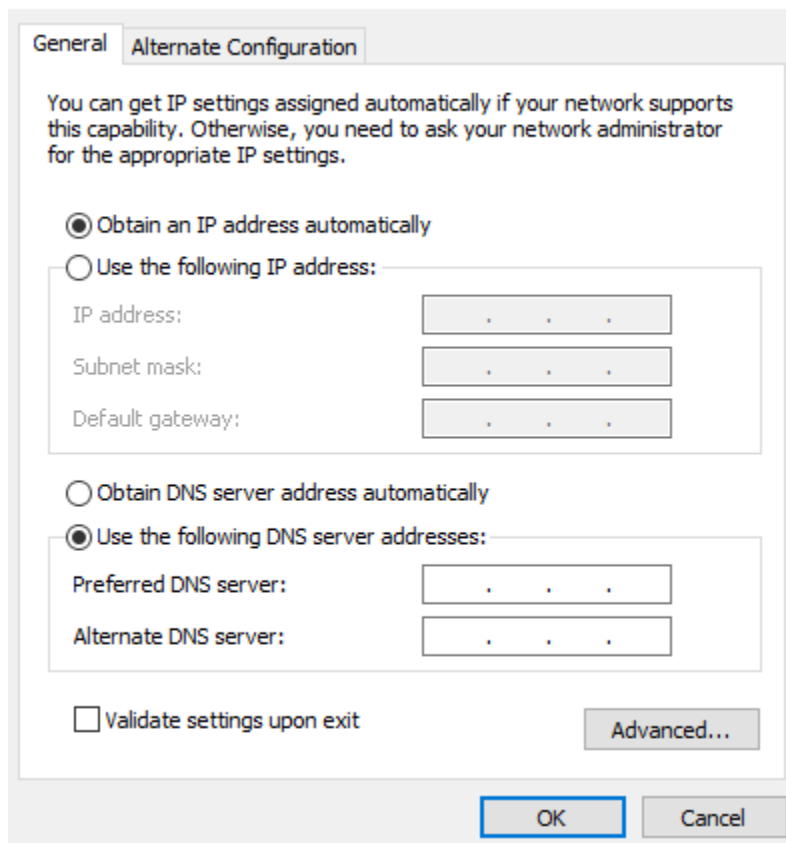

3. Refer to the [Ethernet control protocol document](#) to change the switcher's connection mode to DHCP.
4. Reboot the SE-2600MU. Once the reboot is complete, query for the switcher's IP address to ensure the router has assigned the correct address.

# Chapter 5 Appendices


## Appendix 1 Tally Outputs

The SE-2600MU has a D-sub 25 pin female tally output port. These connections provide bi-colour tally information to a number of other Datavideo products, such as the ITC-100 eight channel talkback system and the TLM range of LCD Monitors.

These ports are open collector ports and as such do not provide power to tally light circuits.

Dielectric strength: Max. DC 24V


Current: Max. 50mA

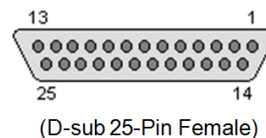

The pin outputs are defined as follows:

Pin No.	Signal name	Input/Output	Signal Description
1	Program 1	Open collector output	Tally output of input video Program 1
2	Program 2	Open collector output	Tally output of input video Program 2
3	Program 3	Open collector output	Tally output of input video Program 3
4	Program 4	Open collector output	Tally output of input video Program 4
5	Program 5	Open collector output	Tally output of input video Program 5
6	Program 6	Open collector output	Tally output of input video Program 6
7	Program 7	Open collector output	Tally output of input video Program 7
8	Program 8	Open collector output	Tally output of input video Program 8
9	Program 9	Open collector output	Tally output of input video Program 9
10	Program 10	Open collector output	Tally output of input video Program 10
11	Program 11	Open collector output	Tally output of input video Program 11
12	Program 12	Open collector output	Tally output of input video Program 12
13	GND	Ground	Ground
14	Preset 1	Open collector output	Tally output of input video Preset 1
15	Preset 2	Open collector output	Tally output of input video Preset 2
16	Preset 3	Open collector output	Tally output of input video Preset 3
17	Preset 4	Open collector output	Tally output of input video Preset 4
18	Preset 5	Open collector output	Tally output of input video Preset 5
19	Preset 6	Open collector output	Tally output of input video Preset 6
20	Preset 7	Open collector output	Tally output of input video Preset 7
21	Preset 8	Open collector output	Tally output of input video Preset 8
22	Preset 9	Open collector output	Tally output of input video Preset 9
23	Preset 10	Open collector output	Tally output of input video Preset 10
24	Preset 11	Open collector output	Tally output of input video Preset 11
25	Preset 12	Open collector output	Tally output of input video Preset 12


### Example of tally connections

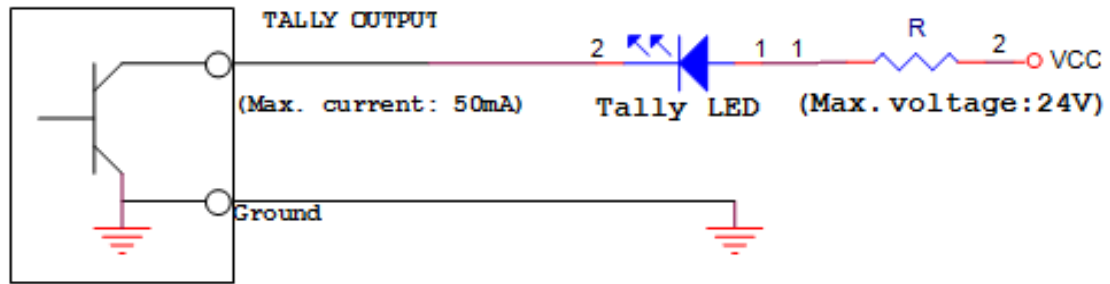

## Appendix 2      GPI / GPO Connections

The SE-2600MU can control external recorder/playback devices like the HDR-80 and HDR-90 via a simple contact closure GPI / GPO switch.

The GPI interface is a 3.5mm Jack Socket which is situated on the rear panel of the SE-2600MU. Contact closure between the Outer and Inner contacts on the jack plug will trigger a user selected event. Power is supplied by the SE-2600MU and is less than 5V DC.

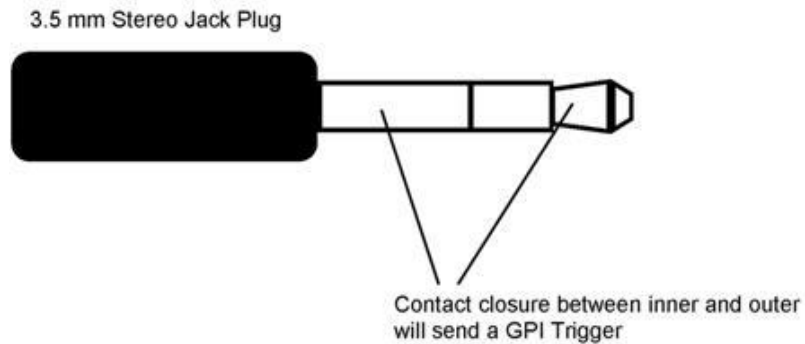


This GPI socket can also be used as a GPO socket to trigger record or playback events with other equipment such as the Datavideo HDR-80 or HDR-90 recorder.

**SAFETY FIRST** The cabling required needs to be designed specifically to connect the SE-2600MU to the chosen record or playback device as they are not all the same. The cabling required can be made by yourself or a competent technician. Please speak with your Dealer or local Datavideo office to get further help and advice.

### Appendix 3 RS-232 Serial Port Pinout

The user is allowed to connect a custom keyboard controller to the SE-2600MU via the RS-232 interface. The table below provides the RS-232 serial port pinout on the device end (SE-2600MU). Note that the RS-232 port is a 9 pin D-sub female connector.

Pin No.	Signal
Pin 1	N/C
Pin 2	TXD (RS-232)
Pin 3	RXD (RS-232)
Pin 4	N/C
Pin 5	GND
Pin 6	N/C
Pin 7	N/C
Pin 8	N/C
Pin 9	N/C

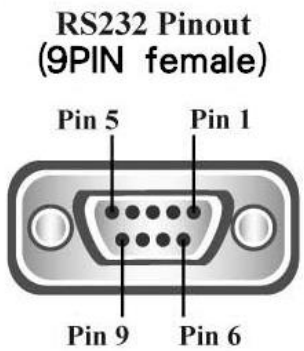

The diagram shows a 9-pin D-sub female connector. The pins are arranged in a 3x3 grid. The top row contains Pin 5 (left) and Pin 1 (right). The middle row contains Pin 9 (left) and Pin 6 (right). The bottom row contains three unlabeled pins. The connector is labeled 'RS232 Pinout (9PIN female)'.

You may download the RS-232 control protocol from the product page.

## Appendix 4      Firmware Update

Datavideo usually releases new firmware containing new features or reported bug fixes from time to time. Customers can either download the SE-2600MU firmware as they wish or contact their local dealer or reseller for assistance.

This section outlines the firmware upgrade process which should take ***approximately few minutes to complete***.

**The existing SE-2600MU settings should persist through the *firmware upgrade process, which should not be interrupted once started* as this could result in a non-responsive unit.**


**Successful firmware upgrade on SE-2600MU requires:**

- PC or laptop
- USB drive
- Access to the Internet for software download

**Follow the steps below to update the SE-2600MU firmware:**

- 1 Download the Latest Firmware:** Visit the [SE-2600MU product page](#) and navigate to the "Downloads" section. Download the firmware file named `se3200_se2600_USB_v1.3.2.9_kb_v175_114_boot_install-MV-User1.zip`.
- 2 Prepare the USB Drive:**
  - Format a USB drive to FAT or FAT32.
  - Extract the downloaded ZIP file then locate a folder named Datavideo.
  - Copy the entire Datavideo folder onto the USB drive.
- 3 Update the Firmware:**
  - Insert the USB drive into the "F/W Upgrade" port on the rear of the SE-2600MU.
  - Power on the switcher using the rear panel switch, then press the front panel power button.
  - The update process will begin automatically and should complete in about one minute.

## Appendix 5      Dimensions & Weight

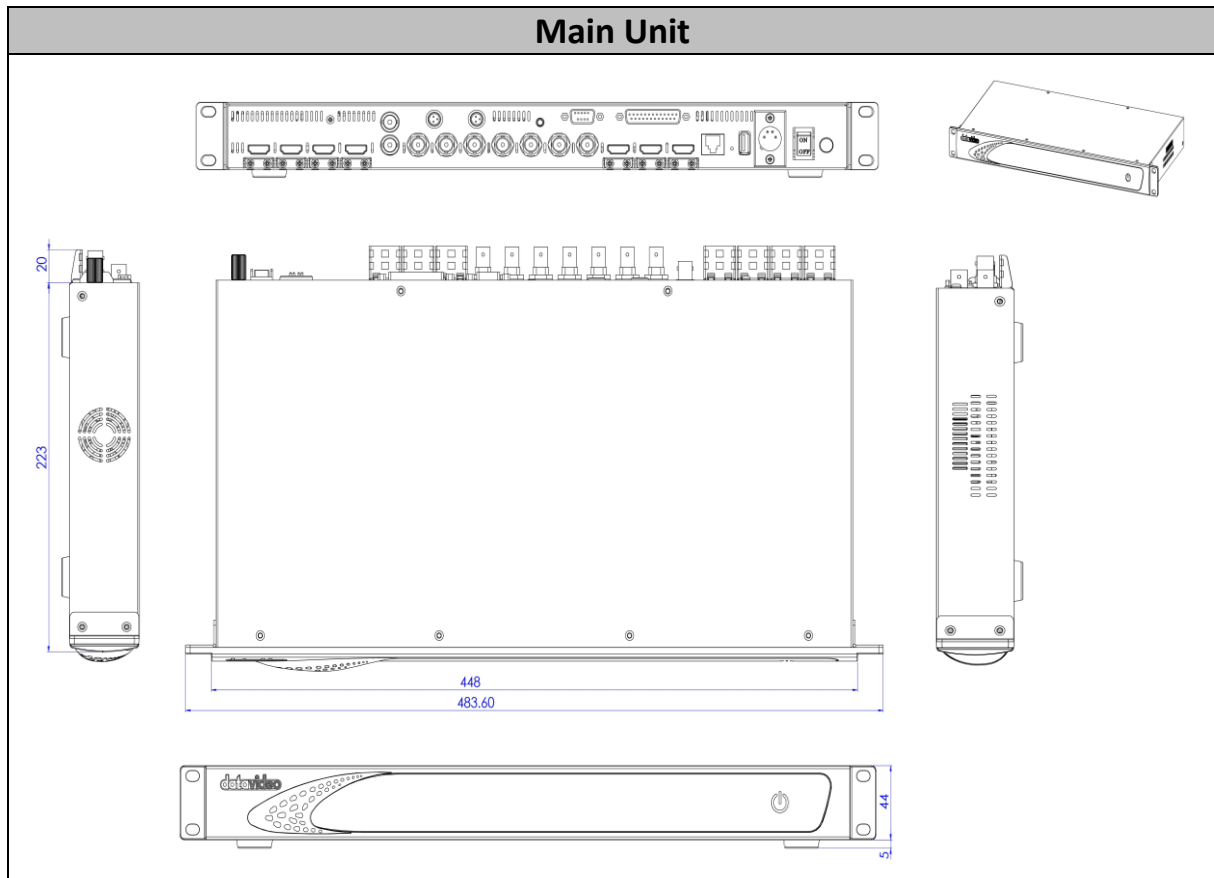

All measurements in millimeters (mm) / 3.4 kg

## Appendix 6 Specifications

<b>Model Name</b>	<b>SE-2600MU</b>
<b>Product Name</b>	<b>HD 8 Channel Digital Video Switcher</b>
<b>Video Standard</b>	Full HD
<b>Video Format</b>	Output: 1080p 50/ 59.94/ 60Hz 1080i 50/ 59.94/ 60Hz 720p 50/ 59.94/ 60Hz Input: 1080p 50/ 59.94/ 60Hz 1080i 50/ 59.94/ 60Hz 720p 50/ 59.94/ 60Hz
<b>Video Processing</b>	SDI: 4:2:2 HDMI: YUV 4:2:2, RGB: 4:4:4
<b>Input Routable / Crosspoint</b>	Yes
<b>Video Input</b>	Total 8 live inputs 4 x SDI 4 x HDMI
<b>Mix HD &amp; SD Source</b>	N/A
<b>Computer Graphical Interface</b>	4 via HDMI
<b>Video Output</b>	3 x SDI and 3 x HDMI outputs assignable: <ul style="list-style-type: none"> <li>• Multiview</li> <li>• Program</li> <li>• Preview</li> <li>• Program + DSK</li> <li>• Clean Program</li> <li>• Clean Preview</li> <li>• Input 1 – 8</li> <li>• Still 1</li> <li>• Still 2</li> <li>• Flex Src 1</li> </ul>
<b>Down-Converted Output</b>	1 x SDI
<b>Built-in Multi-View Monitoring Out</b>	HDMI & SDI assignable
<b>Analogue Audio Input</b>	2 x Balanced Mini XLR
<b>Analogue Audio Output</b>	N/A
<b>Digital Embedded Audio Support</b>	SDI Input/Output 4 Channels HDMI Input/Output 2 Channels
<b>Audio Delay Calibration</b>	Up to 16 Fields or 8 Frames per Channel

<b>A+V Switching</b>	Yes
<b>ChromaKey</b>	4
<b>Title Creator</b>	Yes
<b>USK</b>	4 Keyers supporting Chromakey & Linear/ Luma Key
<b>DSK</b>	2 x DSK supporting Lumakey & Linear key (Key / Fill)
<b>Picture in Picture</b>	4
<b>Logo Insertion</b>	2
<b>Still Store</b>	999+ (1080p)
<b>Effects</b>	Cut, Auto, Wipe, MIX
<b>Transition Preview</b>	Full Transitions Preview
<b>Sync / Reference In / Out</b>	1 x BNC Ref IN 1 x BNC Ref OUT (loop-through)
<b>Tally Output</b>	1 x D-sub 25pin, Dual Color
<b>PC Remote Control</b>	RS-232 / DVIP (Ethernet)
<b>Built-in Audio Mixer</b>	N/A
<b>Special Features</b>	User Memory Presets Free Virtual Sets and Stinger Transitions included
<b>Chassis</b>	Unibody
<b>Dimensions (LxWxH)</b>	483.6 x 223 x 44 mm
<b>Weight</b>	3.4 kg
<b>Power</b>	DC 12V 82W
<b>Operating Temperature</b>	0°C - 40°C [32°F - 104°F]

## Notes

---

## Service & Support

It is our goal to make owning and using Datavideo products a satisfying experience. Our support staff is available to assist you to set up and operate your system. Contact your local office for specific support requests. Plus, please visit [www.datavideo.com](http://www.datavideo.com) to access our FAQ section.

Please visit our website for latest manual update.

[www.datavideo.com/product/SE-2600MU](http://www.datavideo.com/product/SE-2600MU)

**datavideo**  
[www.datavideo.com](http://www.datavideo.com)



@DatavideoUSA @DatavideoIndia2016  
@DatavideoEMEA @Datavideojapan  
@DatavideoTaiwan @DatavideoLatam  
@DatavideoAsia @DatavideoBrasil



@Datavideo  
@Datavideo\_EMEA  
@Datavideo\_Taiwan



@DatavideoUSA  
@DVTWDCN



@DatavideoUSA  
@DatavideoEurope

All the trademarks are the properties of their respective owners.  
Datavideo Technologies Co., Ltd. All rights reserved 2020

Dec-22.2025  
Version E2